

MicroEngine XP-SR200-K-N Programming

Enter Programming Mode (Default MasterPIN = 123456)

* → MasterPIN (Green LED Blinking)

Enable / Disable AutoPin

* → SuperPIN

Change CardPIN

* x3 → Flash Card → Current Pin (4 Digi) → New Pin (4 Digi) → Confirm New Pin (4 Digi)

Set Door Open Pin (AutoPIN)

01 → (4 Digi Password) → #

Delete Door Open Pin (AutoPIN)

01 → 0000 → #

Change MasterPIN

51 → (6 Digi New MasterPIN) #

Change SuperPIN

52 → (6 Digi New Super Pin) #

Set AutoPIN Mode (Activate Door Open With Password Mode)

61 → 1 = ON / 0 = OFF → #

Set Security Mode

62 → 1 = ON / 0 = OFF → #

Set Card + PIN Mode

63 → 1 = ON / 0 = OFF → #

Set Card Lock out Mode

64 → 1 = ON / 0 = OFF → #

Set Door Open Time

71 → (05-99) secs → #

Set Lock Release Time

71 → (05-99) secs → #

Install Card

81 → (6 Digi Card Number) # → *

or

81 → Scan Card # → *

Delete Card

82 → (6 Digi Card Number) # → *

or

82 → Scan Card # → *

Clear Card Database

83 → # → *

Nexxchip Technology

22-1F, Jalan Perdana 6/6, Pandan Perdana,
55300, Kuala Lumpur, Malaysia.

Tel : +603-9202 5459 Sales : +6016-328 8834

website : www.nexxchip.com email : nexxchip@hotmail.my